

FEATURES (Not required for operation)

PASSENGER FOOTRESTS (*SE only*)

The passenger footrests can be adjusted in two stages according to passenger preference.

To raise the footrests:

1. Lift the feet away from the footrests.
2. Push the knob located near the right trunk side pocket.

To lower the footrests:

1. Push the knob.
2. Push down on the center of each footrest with your foot.
3. Release the knob, and press the footrests softly to check they are secure.

⚠ WARNING

- ***Adjusting the passenger footrests while the motorcycle is moving may cause an accident. Always adjust the footrests while the motorcycle is stopped.***

