

FEATURES (Not required for operation)

Auto Volume Control Knob:

This function increases the volume as the speed of the motorcycle increases. Turning the knob clockwise raises the operating level. Set the knob at the center position under normal conditions and then adjust the volume control for desired sound level.

Tone Control Knob:

Turning this knob clockwise emphasizes treble, turning it counterclockwise decreases the treble and emphasizes bass. It is usually set at the center position.

Headset/Speaker Mode Button:

If you use the headset, push this button. The display will indicate "🎧" (headset). To hear sound through the speakers, push this button again.

