
CRANKCASE BREATHER

Refer to the Maintenance Precautions on page 108.

Service more frequently when ridden in rain, at full throttle, or when deposits can be seen in the transparent section of the drain tube.

1. Remove the rear and front left side cover.
2. Remove the crankcase breather tube plug from the tube and drain deposits.
3. Reinstall the crankcase breather tube plug.

