


Preset Stations:

You can store the frequencies of your favorite radio stations in the six preset buttons. Each button will store one frequency on the LW, MW bands, and two frequencies on the UKW band.

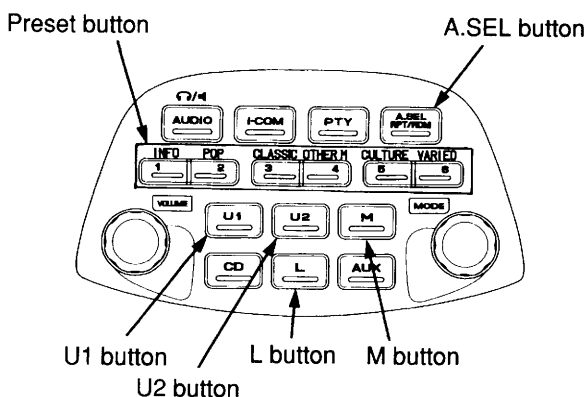

1. Check that A. SEL is not turned on. If it is on, push the A.SEL button to turn it off.
2. Select the desired band, LW, MW or UKW. U1 and U2 let you store two frequencies with each Preset button.
3. Use the TUNE or SEEK function to tune the radio to a desired station.
4. Pick the Preset button you want for that station. Press the button and hold it until you hear a beep.
5. Repeat steps 1 to 3 to store a total of six stations on LW, MW and twelve on UKW.

Once a station's frequency is stored, simply press and release the proper Preset button to tune to it. The preset frequencies will be lost if your motorcycle's battery goes dead or is disconnected, or if the radio fuse is removed.