
VOLUME Control:

Refer to Radio VOLUME Control on page 78.

Intercom Muting:


The intercom mute system automatically lowers (does not silence) the music/program volume when you speak through the intercom.

To adjust this circuit — push the VOLUME knob two times. “INTERCOM MUTE” will display.

- To increase the background music/program volume — turn the VOLUME knob counterclockwise.
- To decrease the background music/program volume — turn the VOLUME knob clockwise.
(control range: 0 from 20.)

INTERCOM MUTE

VOL 8

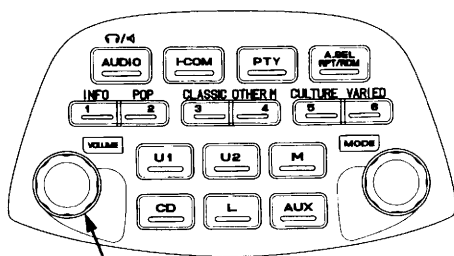

VOLUME knob