

ESSENTIAL INDIVIDUAL COMPONENTS

The speed you were going when you released the SET/DECEL switch is the speed the Cruise Control will hold. You can then “fine tune” the set speed by briefly pushing and releasing the SET/DECEL switch to decrease it or pushing and releasing the RESUME/ACCEL switch to slightly increase it.

A quick “tap” on either the SET/DECEL or RESUME/ACCEL switch may change your speed by only approximately 1.6 km/h (1 mph).

To Cancel the Cruise Control:

Simply push the CRUISE CONTROL master switch until the indicator light goes off (this also erases the memory of the set speed). If you must temporarily disengage the system (but want to retain the memory of the set speed); pull the front brake lever or clutch lever or step on the brake pedal slightly, or close the throttle. If you are still going above 48 km/h (30 mph), you can return to the set speed by simply pushing the RESUME/ACCEL switch. If the motorcycle has decelerated below about 48 km/h (30 mph), you can return to the set speed by using the throttle conventionally until you are above 48 km/h (30 mph) and then pushing the RESUME/ACCEL switch.

