<u>To open the trunk:</u> Push and hold the trunk release button for approximately one second.

