



PARTS LOCATION

Display Illumination Adjustment

To adjust the brightness of the display:

Push the DIM button once. "DIMMER" will display.

- To brighten the display — push the TRIP button (+).
- To darken the display — push the INFO button (-).
(The brighter and darker ranges each have six steps.)
- To set the selected step — push the SETUP button.

