



# FEATURES

## (Not required for operation)

---

### System Control

To turn the audio system on — push the AUDIO button.

To turn the audio system off — push and hold the AUDIO button.

(E, F, ED type)



AUDIO button



(KO, U, SI type)

