




FEATURES

(Not required for operation)

VOLUME Control


- To increase the volume — push the VOLUME lever up or turn the VOLUME knob/button clockwise.
- To decrease the volume — push the VOLUME lever down or turn the VOLUME knob/button counterclockwise.

To increase or decrease the volume rapidly — push the VOLUME lever up or down and hold it down.
(VOLUME level range: from 0 to 30)

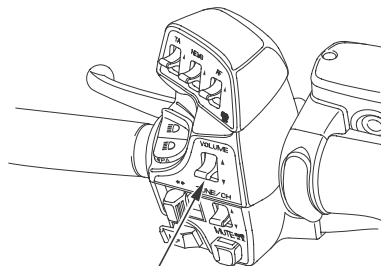

VOLUME lever

VOLUME

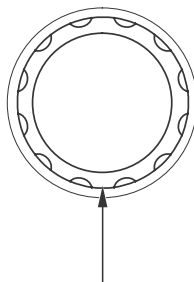

VOLUME knob/button

