




Auto Volume Control (AVC)

To automatically increase volume as the speed of the motorcycle increases. Push the VOLUME knob/button until “AUTO VOL SPK” is displayed (page 72). To select the volume control of headset, push the VOLUME knob/button until “AUTO VOL HS” is displayed (page 72). Then, within 5 seconds, change the AVC setting.

AUTO VOL SPK has four settings – HI, MID, LO, and OFF.

AUTO VOL HS has three settings – HI, LO, and OFF.

VOLUME

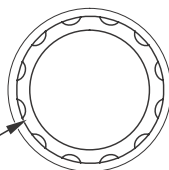

VOLUME knob/button

AUTO VOL SPK
MID

AUTO VOL HS
OFF

