



FEATURES

(Not required for operation)



(KO, U, SI type)

Select Band

To change to AM or FM when you are in the radio mode — push the AM or FM button.

Push the FM button to switch to FM1/FM2.

Reception of a stereo signal is indicated when the STEREO indicator appears in the display. (Stereo reception is available only for FM stereo broadcasts.) As FM stereo reception becomes weaker, special circuits in the radio gradually blend the sound toward mono to maintain some sound quality, even though the STEREO indicator remains ON.

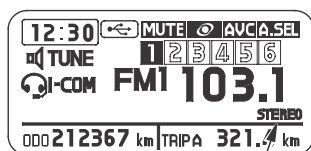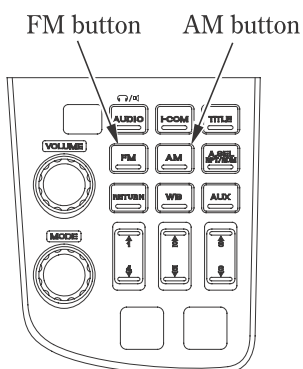

STEREO indicator

