



Select a playlist, artist, album and song by using the MODE knob/button. Push the MODE knob/button until the iPod® menu is displayed, then select the desired list by turning the MODE knob/button. Push the MODE knob/button to set your selection.

The display shows items on the selected list. Turn the MODE knob/button to select an item, then push the MODE knob/button to set your selection.

If you select “ALL”, all available files on the selected list are played. Selecting “RETURN” goes back to the previous display.

Push the TITLE button to change the title display of albums, songs and artists. Push and hold the TITLE button to display the text data of albums, songs and artists from first 8 characters to next 8 characters.

Push the RETURN button to go back to the previous menu while selecting a playlist, artist, album and song.

