



FEATURES


(Not required for operation)

You can select repeat and random play modes when playing a file.

To select a play mode

Push the A.SEL RPT/RDM button until the desired play mode is displayed.

The display changes as follows each time the A.SEL RPT/RDM button is pushed.

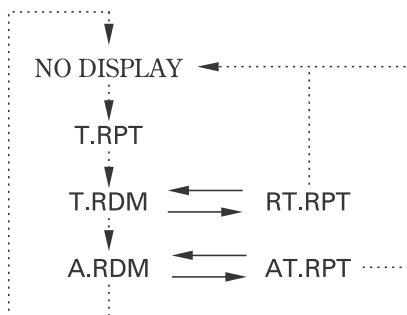

Push the A.SEL RPT/RDM button:

Push and hold the A.SEL RPT/RDM button:

Play Mode Menu Items

Mode	Function
T.RPT	Repeats the current track.
T.RDM	Plays all available files in a selected list (playlists, artists, albums or songs) in random order.
A.RDM	Plays all available albums in random order.
RT.RPT	Repeats current file in T.RDM play mode.
AT.RPT	Repeats current file in A.RDM play mode.

