




MAINTENANCE

CRANKCASE BREATHER

Refer to the Safety Precautions on page 131.

1. Remove the left cylinder head side cover (page 140).
2. Place a drain pan under the crankcase breather tube plug.
3. Remove the crankcase breather tube plug from the tube and drain deposits.
4. Reinstall the crankcase breather tube plug.
5. Reinstall the left cylinder head side cover.

Service more frequently when ridden in rain, at full throttle, or when deposits can be seen in the transparent section of the drain tube.

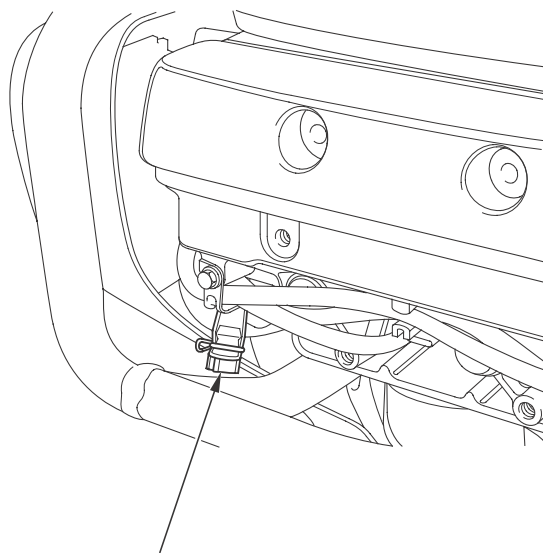

Crankcase breather tube plug

