




### High Beam Headlight Bulb

1. Attach a cloth to the cover and remove the cover with care using a flat-tip screwdriver.
2. Open the left fairing pocket cover and remove the clips (page 142).
3. Remove the bolts A and lid.

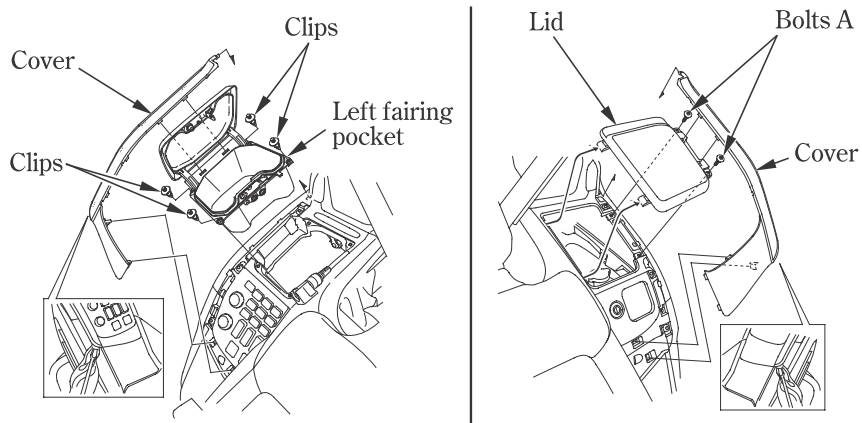

4. Pull off the socket without turning.
5. Remove the dust cover.
6. Remove the bulb while pressing down on the pin.
7. Pull out the bulb without turning.
8. Install a new bulb in the reverse order of removal.
  - Install the dust cover with its arrow mark facing up.

