


Transmission Oil Level

To check the oil level and add oil, proceed as follows:

1. Stop the engine. Place the motorcycle in an upright level position.
2. Remove the oil filler cap ①, and check the oil level with the dipstick. If it is below the level mark ② on the dipstick add oil up to the mark.

NOTE: When checking the oil level, insert the dipstick into the oil filler hole, but do not screw it in.

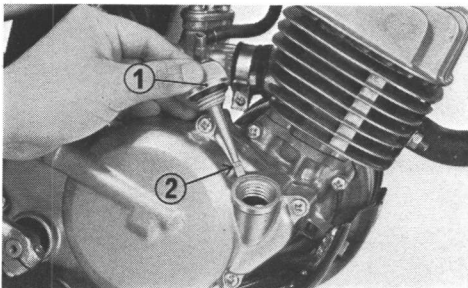

① Oil filler cap ② Oil level mark


Transmission Oil Change

Use only motor oil of the grade and viscosity recommended on page 13. When changing oil, drain the used oil from the crankcase while the engine is warm. This will ensure complete and rapid draining.

1. Remove the oil filler cap ① from the right crankcase cover.
2. Place an oil drain pan under the engine to catch the oil, and then remove the drain plug ③ with a 17 mm wrench.

NOTE:

To remove the drain plug, it is advisable

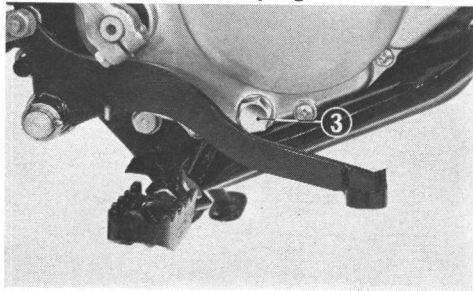

③ Drain plug