


Spark Arrestor Maintenance

The exhaust system spark arrestor must be purged of accumulated carbon periodically. The spark arrestor is located under the seat directly in front of the rear fender and is cleaned in the following manner:

1. Remove the left side number plate.
2. Remove the two 17 mm plugs from the bottom of the spark arrestor. Take care not to lose the sealing washers.

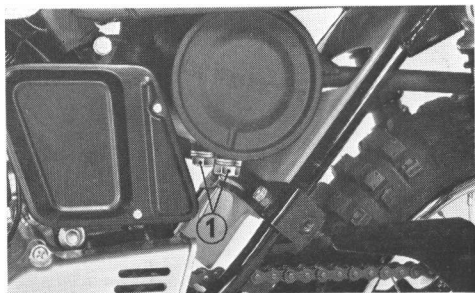

① 17 mm plugs

3. Start the engine and rev approx. twenty times.
4. After clearing the spark arrestor of carbon reinstall the spark arrestor plugs, sealing washers, and number plate.

WARNING:

- Do not perform this operation immediately after the engine has been run because the exhaust system becomes very hot.
- Because of the increased fire hazard ensure that there are no combustible materials in the area when purging the spark arrestor.
- Exhaust gases contain poisonous carbon monoxide. Perform this operation only in a well ventilated area.