

# Driver Controls

## Ignition Switch

The ignition switch is a three-position, key-operated switch used to start and stop the engine.

**OFF (O)** — The engine and all electrical circuits are off. The key can be inserted and removed only when it is in this position.

**ON (I)** — The electrical circuits are on. You can use the accessory power socket in this position.

**START (II)** — This position is used only to start the engine. The key will automatically return to the ON (I) position when you let go of the key.

