

# Storing Your Honda

---

## Preparation for Storage

Refer to *Safety Precautions* on page 69.

1. Change the engine oil and filter (page 93).
2. Make sure the cooling system is filled with a 50/50% antifreeze solution (page 103).
3. Fill the fuel tank. Make sure the fuel fill cap is properly installed.
4. To prevent rusting in the cylinders, perform the following:
  - Disconnect the spark plug cap from the spark plug.
  - Remove the spark plug.  
Do not connect the spark plug to the spark plug cap.
  - Pour a tablespoon (15—20 cc) of clean engine oil into the cylinder and cover the spark plug hole with a piece of cloth.
  - Turn the ignition switch to the START (II) position and crank the engine several times to distribute the oil.
  - Reinstall the spark plug and spark plug cap.

(cont'd)

**Tips 159**