

Quick Reference

These symbols are used in Driver Controls section:

SYMBOL	COMPONENT	SEE PAGE
II	START — ignition switch	17
I	ON — ignition switch	17
○	OFF — ignition switch	17
OFF	OFF — headlight switch	18
≡D	HI — headlight switch	18
≡D	LO — headlight switch	18
D, N, R	Drive — Neutral — Reverse — shift lever	19