


4. Apply the brake several times and check for free wheel rotation when released.

Other Checks:

Make sure the brake rod, brake arm, spring and fasteners are in good condition.

Wear Indicator:

When the brake is applied, an arrow (1) attached to the brake arm (2) moves toward a reference mark (3) on the brake panel (4). If the arrow aligns with the reference mark on full application of the brake, the brake shoes must be replaced.

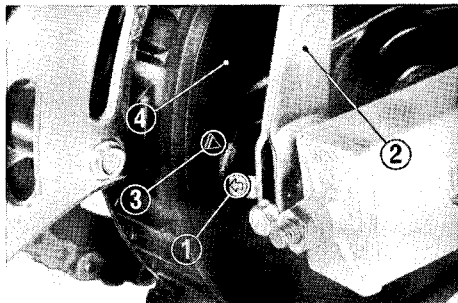

(1) Arrow
(2) Brake arm

(3) Reference mark
(4) Brake panel