



## OPERATING INSTRUCTIONS

### Ignition Switch

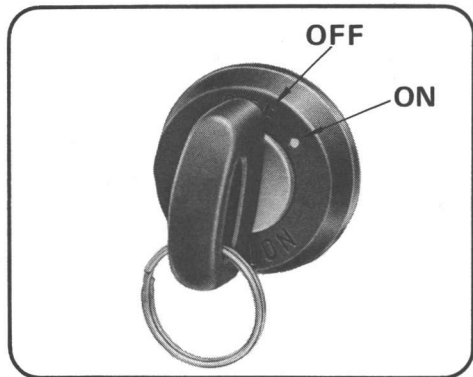

- OFF**— Engine cannot be started.  
Key can be removed.
- ON**— Engine can be started.  
Key cannot be removed.

### Speedometer and Indicator Light

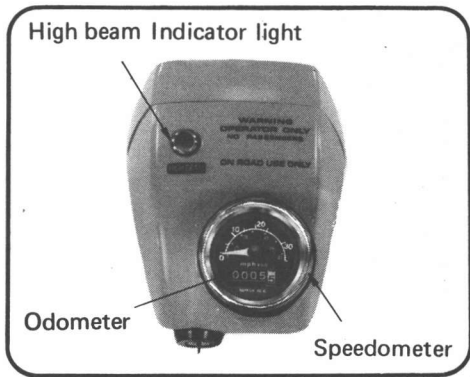

#### Speedometer

Indicates driving speed.

#### High beam indicator light

Light will be on when headlight is on high beam.

#### Odometer

Indicates total accumulated distance traveled.