


Headlight Switch (U. K. model)

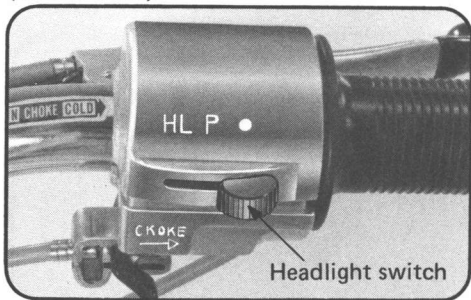


HL— Taillight and meter light on. Headlight will be on when the engine is running.

P— Position light, taillight and meter light on.

OFF (dot)—Headlight, taillight, position light and meter light off.

(For Australia and New Zealand models)

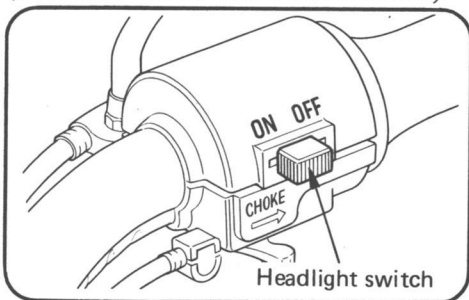

ON —Taillight and meter light on. Headlight will be on when the engine is running.

OFF —Headlight, taillight, position light and meeter light off.