
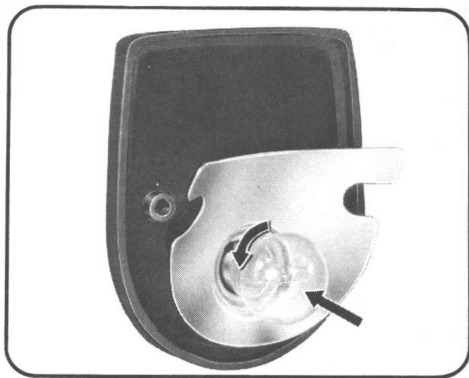


Bulb Replacement Tail/stoplight

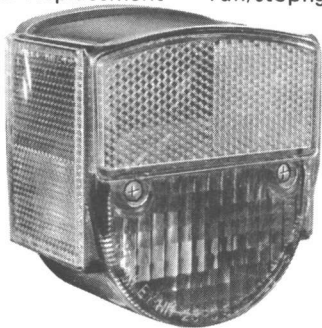

1. Remove the two screws retaining stoplight lens.
2. Press the bulb inward and twist to the left and the bulb can be removed.
3. Replace with a good bulb.
4. When installing the taillight lens, do not overtighten the screws, as this may damage the lens.