


Bulb Replacement


Turn Signal light

SCREW

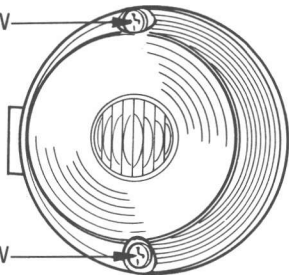

SCREW

1. Remove the two screws retaining the turn signal light lens.

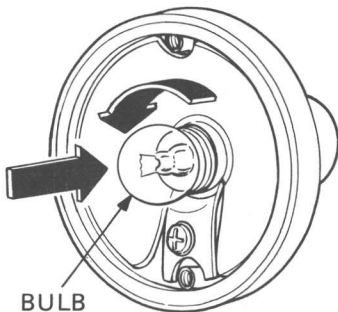

BULB

2. Press the bulb inward and twist to the left and the bulb can be removed.
3. Replace with a new bulb.
4. When installing the turn signal light lens, do not overtighten the screws, as this may damage the lens.