



## Fuse

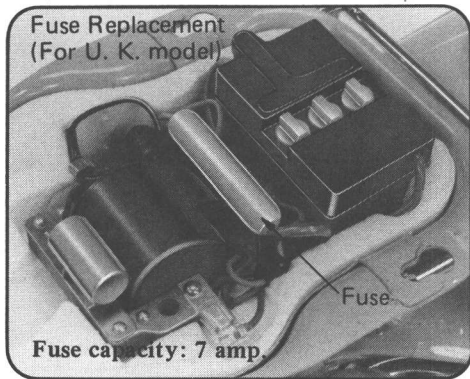

When frequent failure of fuse occurs, it usually indicates a short circuit or an overload in the electrical system. In this case the electrical system should be checked visually for damaged insulation or other possible malfunctions. If the problem cannot be located visually, the motorcycle should be examined by an authorized Honda dealer.

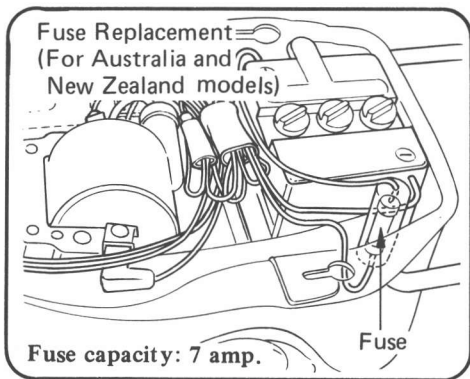

### **WARNING**

- \* Never use a fuse with a different rating from that specified in the Owner's manual.
- \* Never use conductive material to replace a recommended fuse. Loss of lighting, serious damage to the electrical system or fire may result.