



The engine is started by a spring which is tensioned by pressing down the starter pedal three full strokes or until the positive stop is felt.

WARNING

- * The machine is equipped with an automatic clutch which engages as engine speed is increased.
Do not attempt to "BLIP" the throttle as the machine will move forward suddenly, causing possible loss of control.