
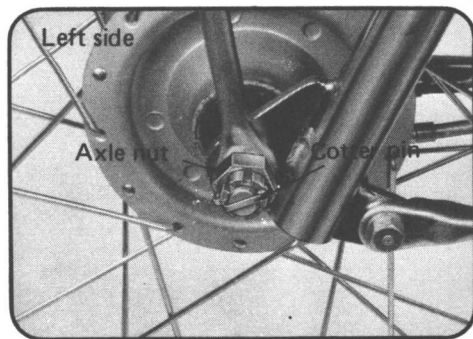


WHEEL REMOVAL

Front

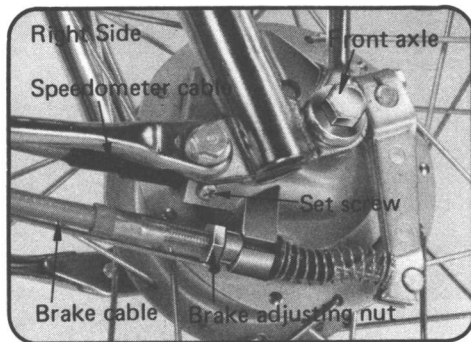

1. Remove the set screw and disconnect the speedometer cable.
2. Turn the brake adjusting nut counter-clockwise all the way, disconnect the brake cable.
3. Pull out the cotter pin.

4. Remove the axle nut and pull out the axle.

Torque for axle nut

3-4 kg-m (21.7-28.9 lbs. ft.)

CAUTION

Always replace used cotter pins with new ones.