

## WHEN THE IDLE STOP SWITCH IS SET IN THE IDLING STOP POSITION (@ 125/150 ES)

The engine will stop idling about 3 seconds after you have ridden the scooter at speed above 10 km/h, brought it to a complete stop, then closed the throttle completely with the engine warmed and the driver is seated.

The standby indicator will start flashing to indicate that the idle stop system is in operation.



### NOTE:

- Sustained idle stop may cause the battery to run down.