

PARKING

1. When the scooter has stopped turn the ignition switch to "OFF" and remove the key.
2. Lift the scooter onto the center stand to park it.

CAUTION

- Park on firm level ground so that it does not fall over.
3. Lock the steering to help prevent theft (page 38).

⚠ WARNING

- The exhaust pipe and muffler become very hot while the scooter is running and remain sufficiently hot to burn if touched even after shutting off the engine.
- USE THE CENTER STAND

