


## Blown Fuse

Before handling fuses, see “Inspecting and Replacing Fuses.” ► P. 45

### Fuse Box Fuses

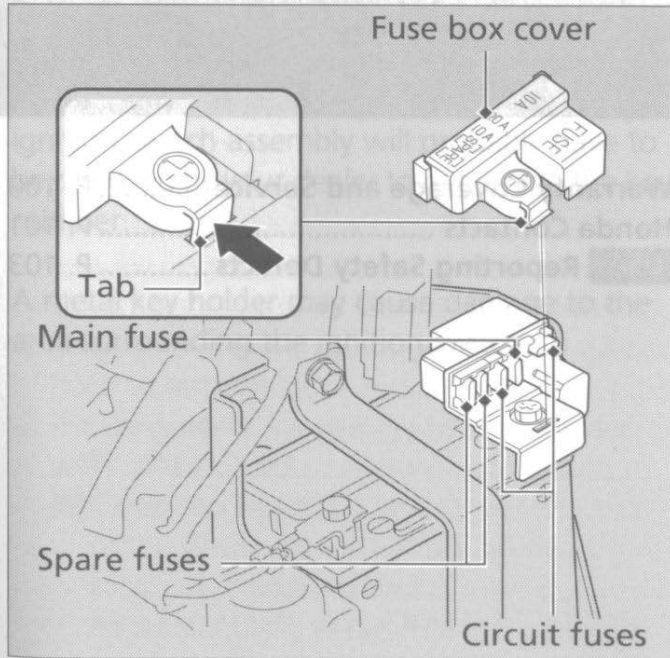

1. Remove the inner cover. ► P. 52
2. Remove the fuse box cover by pressing the tab.
3. Pull the main fuse and circuit fuses out one by one and check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Install the fuse box cover.
5. Install the inner cover.

#### NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your scooter inspected by your dealer.