


Switching Between Automatic Shift Mode and 6-speed Manual Mode

Switching Automatic Shift Mode to 6-speed Manual Mode:

Press the mode shift switch (1). The shift indicator (2) appears in the instrument panel to show the selected gear position. When switching automatic shift mode to 6-speed manual mode, the gear is switched to the suitable position.

- When switching automatic shift mode to 6-speed manual mode, the engine rev will fluctuate for selecting the suitable gear position for the speed.

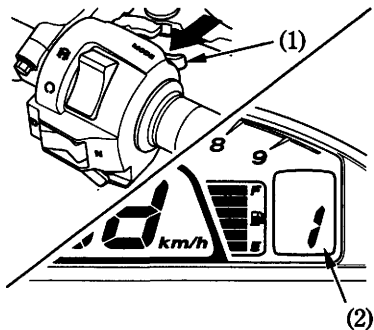

- (1) Mode shift switch
- (2) Shift indicator