


Switching 6-speed Manual Mode to Automatic Shift Mode:

Press the mode shift switch (1). The shift indicator (4) goes off and the D mode indicator (2) or S mode indicator (3) appears. When switching 6-speed manual mode to automatic shift mode, the drive mode changes depending on the last selection.

- If you press and hold the mode shift switch, the 6-speed manual mode switching can not be done.

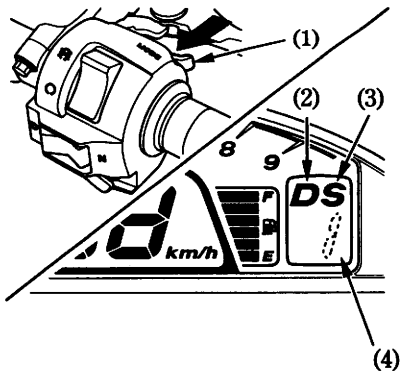

- (1) Mode shift switch
- (2) D mode indicator
- (3) S mode indicator
- (4) Shift indicator