


## FRONT COWL

The left front cowl must be removed for air cleaner maintenance.


### Removal:

1. Remove the front seat (page 72 ).
2. Pull back the rubber dust cover (1).
3. Disconnect the connector (2).
4. Remove the rearview mirror assembly (3) by removing the bolts A (4) and washers.

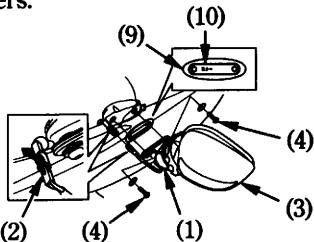

- |                              |                 |
|------------------------------|-----------------|
| (1) Rubber dust cover        | (4) Bolts A     |
| (2) Connector                | (9) Metal plate |
| (3) Rearview mirror assembly | (10) Arrow mark |

5. Remove the bolt B (5), clip A (6) and clips B (7) and pull the front of the front cowl (8) outwards.

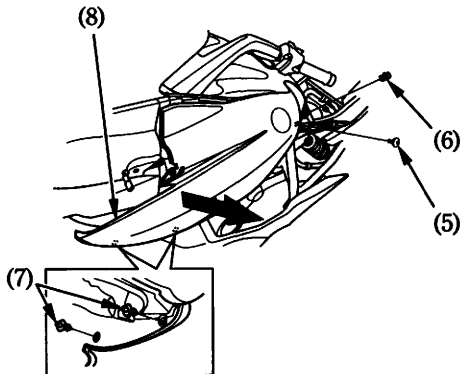

- |            |                |
|------------|----------------|
| (5) Bolt B | (7) Clips B    |
| (6) Clip A | (8) Front cowl |