

INSTRUMENT AND INDICATORS

The indicators are located within and near the instrument panel.

Their functions are described in the table on the following page.

- (1) Speedometer
- (2) Odometer
- (3) Tachometer
- (4) Tachometer red zone
- (5) Low oil level indicator
- (6) Coolant temperature gauge
- (7) Fuel gauge
- (8) Neutral indicator
- (9) Turn signal indicator
- (10) High beam indicator
- (11) Tripmeter
- (12) Tripmeter reset knob

