


SIDE COVER


Removal :

1. Remove the rear and front seat (page 36).
2. Remove the bolt (1) and screws (2).
3. Gently pull out two prongs (3), and pull the two tabs (4) out of their slots.
4. Remove the side cover (5).

<Right side cover>

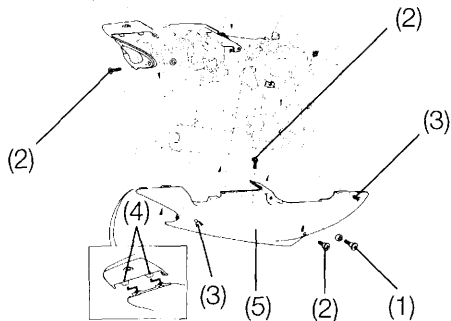

<Left side cover>

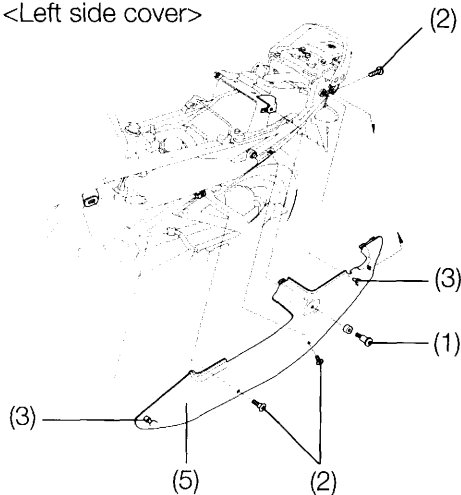

- (1) Bolt
(2) Screws
(3) Prong

- (4) Tab
(5) Side cover