


## MIDDLE FAIRING

Removal :

1. Remove the screws (1).
2. Pull down the middle fairing (2) and remove it.

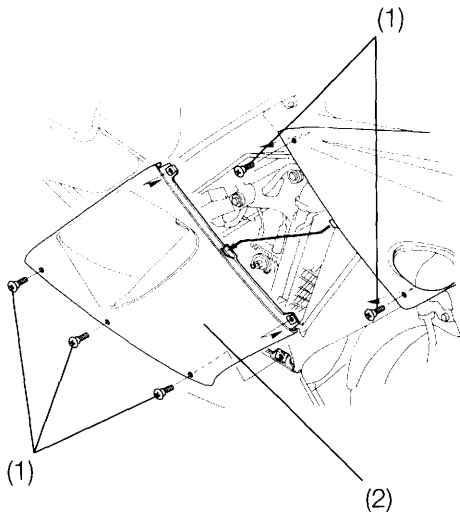

- (1) Screws  
(2) Middle fairing