

MAINTENANCE STAND


Use two people to place the motorcycle on the maintenance stand.

⚠ WARNING

- **Improper use of the maintenance stand may cause injury.**
 - **Be sure the maintenance stand is placed on a firm, level ground.**
 - **Never ride the motorcycle on the maintenance stand or run the engine while the motorcycle is on the maintenance stand.**
 - **Be sure the maintenance stand is fully engaged and the attaching bolt is fastened securely before working on the motorcycle.**

To install :

1. Support the motorcycle on a firm, level ground using the side stand.
2. Install the maintenance stand on the motorcycle as follows:
 - ① Align the top ends of the maintenance stand (1) with the rear axle nut (2).
 - ② Turn the attaching bolt (3) in until resistance is felt.

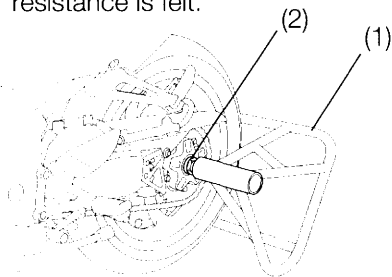

- (1) Maintenance stand
(2) Rear axle nut