

## Adjustment :

Drive chain slack should be checked and adjusted, if necessary, every 1,000 km (600 miles). When operated at sustained high speeds or under conditions of frequent rapid acceleration, the chain may require more frequent adjustment.

If the drive chain requires adjustment, the procedure is as follows:

1. Turn the engine off, place the motorcycle on its side stand and shift the transmission into neutral.
2. Loosen the bearing holder pinch bolt (1).
3. Turn the bearing holder (2) clockwise or counterclockwise to obtain the proper chain slack with the pin spanner (3).
4. Torque the bearing holder pinch bolt to:  
73 N.m (7.4 kgf.m, 54 lbf.ft)
5. Recheck chain slack.


## **⚠ WARNING**

- **If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly.**

## **CAUTION :**

- **Damage to the bottom part of the frame may be caused by excessive drive chain slack of more than:**

**50 mm (2.0 in)**

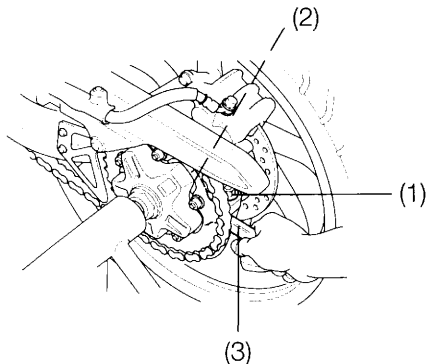

- (1) Bearing holder pinch bolt
- (2) Bearing holder
- (3) Pin spanner