


3. Enter operating range with the Honda smart card key.
4. Make sure that the engine stop switch is at \bigcirc (RUN).
5. Push the ignition switch (2) once and turn to ON.

Confirm the following:

- The PGM-FI malfunction indicator lamp (MIL) is OFF.
- The Honda smart card key indicator is OFF.

NOTICE

Operating the engine with insufficient oil pressure can cause serious engine damage.

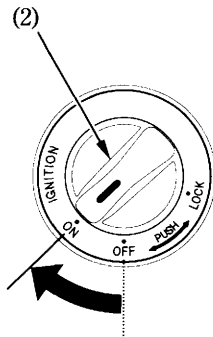

(2) Ignition switch