



## Rear Wheel Removal

1. Place the motorcycle on its center stand.
2. Remove the cap (1), cotter pin (2), axle nut (3), and then remove the axle center collar (4).
3. Push the axle (5) into the wheel hub.

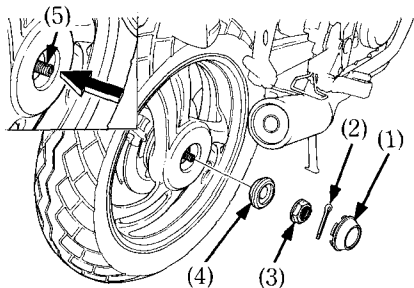

- (1) Cap  
(2) Cotter pin  
(3) Axle nut  
(4) Axle center collar  
(5) Axle

4. Attach the tapes (6) to the wheel rim (7) and brake caliper (8) to avoid damaging the wheel.
5. Remove the wheel from the drive pins (9) and pull it backward to get between the brake disc (10) and muffler.
6. Swing the wheel to the left and pull it out backward as shown.

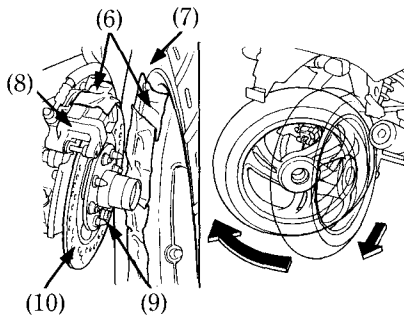

- (1) Tapes  
(7) Wheel rim  
(3) Brake caliper  
(9) Drive pins  
(10) Brake caliper