

Make free play adjustments by turning the adjusting nut (4) at the brake arm.


**NOTE:**

- \* Make sure the cut-out on the adjusting nut is seated on the brake arm pin (5) after making final free play adjustment.
- \* If proper adjustment cannot be obtained by this method, see your authorized Honda dealer.

4. Apply each brake several times and check for free wheel rotation when released.

Other Checks:

Make sure the brake rod, brake arm, spring and fasteners are in good condition.

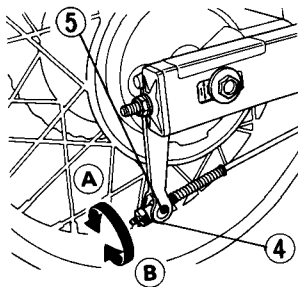

(4) Adjusting nut  
(5) Arm pin

(A) Increase free play  
(B) Decrease free play