


AIR CLEANER

(Refer to the maintenance precautions on page 45).

The air cleaner should be serviced at regular intervals (page 40). Service more frequently when riding in unusually wet or dusty areas.

1. Remove the left side cover (1).
2. Remove the air cleaner cover screws (2) and the cover (3).

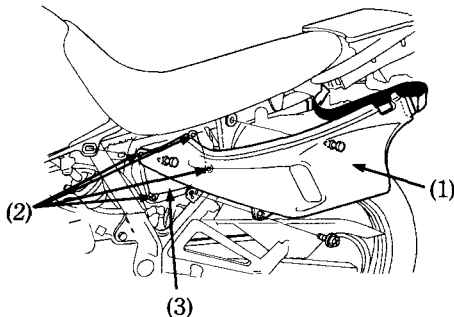


- (1) Left side cover (3) Air cleaner case cover
(2) Screws

3. Release the hooks (4) and remove the air cleaner element (5).
4. Discard the air cleaner element and reinstall a new one.

Use the Honda genuine air filter or an equivalent filter specified for your model. Using the wrong Honda filter or a non-Honda filter which is not of equivalent quality may cause premature engine wear or performance problems.

5. Install the removed parts in the reverse order of disassembly.

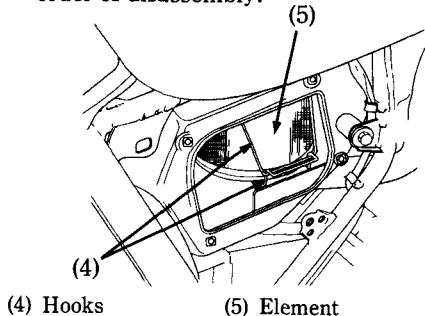

- (4) Hooks (5) Element