


Engine Oil

Engine oil quality is the chief factor affecting engine service life. Change the engine oil as specified in the maintenance schedule (page 40).

NOTE:

* Change the engine oil with the engine at normal operating temperature and the motorcycle on its side stand to assure complete and rapid draining.

1. Start the engine and let it idle for a few minutes.
2. Stop the engine and remove the oil filler cap/dipstick (1).

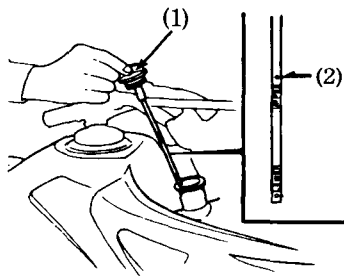

- (1) Oil filler cap/dipstick
(2) UPPER level mark