

WHEEL REMOVAL


(Refer to the maintenance precautions on page 45).

Front Wheel Removal


1. Raise the front wheel off the ground by placing a support under the engine.
Remove the front fork cover (1) by removing the bolt and screw (2).
2. Remove the speedometer cable set screw (3) and disconnect the speedometer cable (4).
3. Remove the front axle holder nuts (5) and the front axle holder (6) .
4. Unscrew the axle (7). Remove the wheel.

NOTE:

* Do not depress the brake lever when the wheel is off the motorcycle. The caliper piston will be forced out of the cylinder with subsequent loss of brake fluid. If this occurs, servicing of the brake system will be necessary. See your authorized Honda dealer for this service.

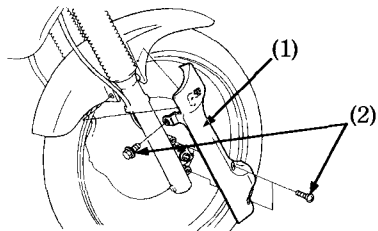

(1) Front fork cover (2) Bolt and screw

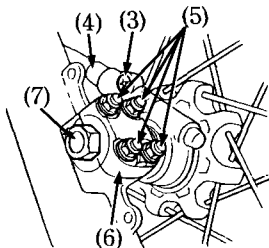

(3) Set screw (6) Axle holder
(4) Speedometer cable (7) Axle
(5) Axle holder nuts