

**REGULAR
SERVICE
PERIOD**

**EVERY 30
OPERATING
DAYS**

NOTE:
Change oil every
30 operating days
or every 3 months,
whichever occurs
first.

- ENGINE OIL—Change.
- SPARK PLUG—Clean and adjust gap, or replace if necessary.
- *CONTACT POINTS AND IGNITION TIMING—Clean, check, and adjust or replace if necessary.
- *VALVE TAPPET CLEARANCE—Check and adjust if necessary.
- POLYURETHANE FOAM AIR FILTER ELEMENT—Clean and oil. Service more frequently if operated in dusty areas.
- *CARBURETOR—Check and adjust if necessary.
- THROTTLE OPERATION—Inspect cable. Check and adjust free play.
- *CLUTCH—Check operation and adjust if necessary.
- DRIVE CHAIN—Check, lubricate, and adjust if necessary.
- BRAKE CONTROL LINKAGE—Check linkage and adjust if necessary.
- TIRES—Inspect and check air pressure.
- ALL NUTS, BOLTS, AND OTHER FASTENERS—Check security and tighten if necessary.

EVERY YEAR

- FUEL LINE—Check.
- *STEERING HEAD BEARINGS—Adjust.
- *BRAKE SHOES—Inspect and replace if worn.