

Spark Plug

NGK C-7 HS or ND U22 FS spark plug is used on this model. Servicing of the spark plug is as follows.

1. Remove the spark plug with the spark plug wrench which is attached under the seat after removing the high tension cord terminal cap.
2. Check tip of the spark plug for fouling or deposit.

Clean the spark plug with a spark plug cleaner, however, if it is not available, use a stiff pin or brush to remove the deposited substance, and wash in solvent followed by drying with a rag.

3. Adjust the spark plug gap ① to 0.024~0.028 in. (0.6~0.7 mm) with a clearance gauge.


The adjustment is made by bending the negative electrode ②.

4. When installing the spark plug, it should be first screwed in finger tight and then

torqued with the spark plug wrench for further 1/2 to 3/4 turn.

NOTE:

- Never use an improper heat range spark plug.
- Do not attempt to dry or remove soot from the spark plug by burning.

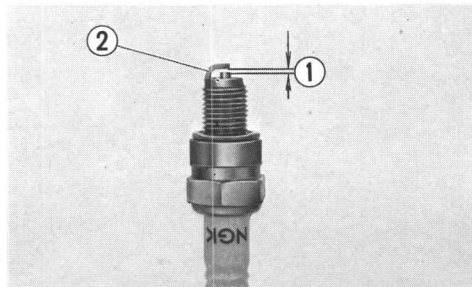

① Spark plug gap ② Negative electrode