


Air Filter

Air filter element cleaning and or replacement depends on the motorcycle operating conditions. Your HONDA dealer can help you to determine the frequency of cleaning or replacing the element.


1. Unscrew the air filter tube fixing screw ① and remove the air filter from the carburetor.
2. Unscrew the two air filter cover

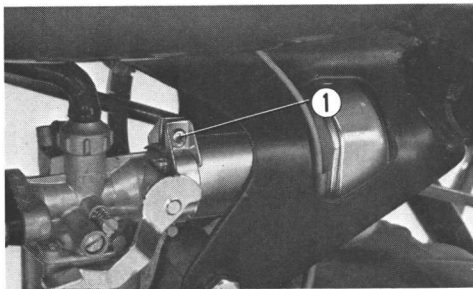

① Air filter tube fixing screw

screws and separate the air filter cover ③.

3. Remove the air filter element ②.
4. Wash the air filter element in clean stoddard solvent and allow to dry thoroughly.
5. Soak the air filter element in clean gear oil (No. 80-No. 90) until saturated, then squeeze out excess oil.
6. Reinstall the air filter into the air filter case.

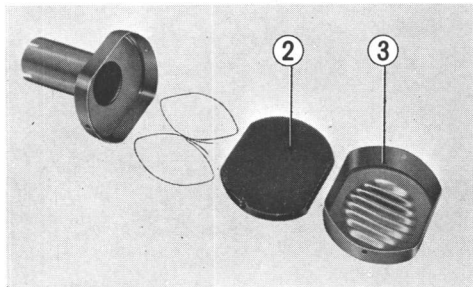

② Air filter element

③ Air filter cover