


Front Wheel Removal

Removal of the front wheel is performed in the following manner.

1. Place a suitable block under the engine to raise the front wheel off the ground.
2. Remove the front brake adjusting nut ① and remove the front brake cable from the brake arm.
3. Remove the front wheel axle nut ② and pull out the front wheel axle ③.
4. The front wheel can be removed from the frame.
5. Installation of front wheel is performed in the reverse order of described above.

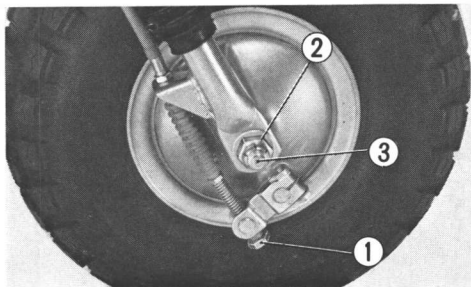

- ① Front brake adjusting nut
- ② Front wheel axle nut
- ③ Front wheel axle